
Vidicon

SpectraPlex Type for Single-Tube Color Cameras

- Integral Dichroic Filter Stripes Optically Encode Color Information
- Signal Can Be NTSC (or PAL) Encoded
- Requires Only Moderate Studio Lighting—100 lumens/foot² (fc)
- Produces Fully Compatible Video for Black-and-White Monitors
- Familiar Vidicon Structure Magnetic Focus and Deflection

General Data

Electrical:
Heater Voltage 6.3 ± 5% V
Heater Current at 6.3 Volts, ac or dc 0.6 nominal A
Focusing Method Magnetic
Deflection Method Magnetic
Direct Interelectrode Capacitance:a
Target to all other electrodes 4.6 pF
Optical:
Outer faceplate glass is Corning code 7056 having a thickness of $0.094^{\prime\prime}\pm0.012^{\prime\prime}.$
Inner faceplate Dark-Clad Fiber Optics
Photoconductor Antimony Trisulfide
Orientation of quality rectangle Proper orientation is obtained when the horizontal scan is essentially parallel to the plane passing through the tube axis and short index pin.
Maximum Useful Diagonal of Image 0.625 in (16 mm)
Mechanical:
Maximum Length
Maximum Diameter
Bulb T8
Base Small-Button Ditetrar 8-Pin (JEDEC No.E8-11)
Socket Cinchb No.8VT (133-98-11-015), or equivalent
Deflecting Yoke — Focusing Coil — Alignment Coil — Assembly
Operating Position
Weight (Approx.)

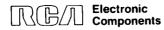

Maximum and Minimum Ratings,

Absolute-Maximum Values: e

For scanned area of 1/2" x 3/8" (12.7 mm x 9.5 mm)

For scanned area of 1/2" x 3/8" (12.7 mm x 9.5 mm)				
	Min.	Max.		
Grid-No.4 Voltagef	_	1000	V	
Grid-No.4 and Grid-No.3 Voltage Difference	_	600	V	
Grid-No.3 Voltage ^f	-	1000	V	
Grid-No.2 Voltage	_	350	V	
Grid-No.2 Power Dissipation		1	W	
Grid-No.1 Voltage	-150	0	V	
Heater-Cathode Voltage	-125	10	V	
Heater-Voltage Tolerance	-	5	%	
Target Voltage	_	70	V	
Dark Current		0.25	μΑ	
Peak Target Current9	_	0.75	μ A	
Faceplate:		(1000	_	
Illumination ^h			im/ft ²	
Temperature:		(10,000	iux	
Operating and storage	-	71	oC	
Typical Operation and Performance	e Data:			
For scanned area of 1/2" x 3/8" $-$ Faceplate temperature of 30° \pm 3° C and	d standard	TV scannin	g Rate	
Grid-No.4 (Decelerator) Voltagef		900	V	
Grid-No,3 (Beam-Focus Electrode) Voltage [†]		540	V	
Grid-No.2 (Accelerator) Voltage		300	V	
Grid-No.1 Voltage for Picture Cutoffl	65 to	-100	V	
Average "Gamma" of Transfer Characteristic for Signal-Output Current Between 30 nA and 300 nA		0.65		
Lag-Per Cent of Initial Value of Signal-Output Current 1/20 Second After Illumination is Removed ^k	, , , , , , , , , ,	. 25	%	
Peak-to-Peak Blanking Voltage:				
When applied to grid No.1		. 75	V	
When applied to cathode		20	V	


Field Strength at Center of Focusing Coil ^m	60 ± 5	G
Field Strength of Adjustable Alignment Coil ⁿ	0 to 4	G
Peak Deflecting-Coil Current:		
Horizontal	250	mA
Vertical	45	mA
Sensitivity		
Conditions		
Faceplate illumination (highlight)	6	Im/ft ² (fc)
Dark currentP	30	nA
Performance		
Target voltage ^{q,r}	22 to 45	V
Signal-Output Current ^s	300	nA

- a This capacitance, which effectively is the output impedance of the tube, is increased when the tube is mounted in the deflecting yoke and focusing-coil assembly. The resistive component of the output impedance is in the order of 100 megohms.
- b Made by Cinch Manufacturing Corporation, 1501 Morse Ave., Elk Grove Village, ILL 60007.
- C Made by Cleveland Electronics Inc., 17877 St. Clair Avenue, Cleveland, OH 44110.
- d These components are chosen to maximize resolution uniformity over the useful picture area of the camera tube. Resolution uniformity is necessary for good color uniformity.
- A description of the Absolute Maximum Rating is given in the General Section titled Rating System for Electron Tubes.
- f Grid-No.4 voltage must always be greater than grid-No.3 voltage. The maximum voltage difference between these electrodes, however, should not exceed 600 volts. The recommended ratio of grid-No.3 to grid-No.4 voltage is 6/10.
- 9 Video amplifiers must be designed properly to handle target currents of this magnitude to avoid amplifier overload or picture distortion.
- h For conditions where "white light" is uniformly diffused over entire tube face.
- J With no blanking voltage on grid No.1.
- k For initial signal-output current of 300 nanoamperes and a dark current of 30 nanoamperes.




- m The polarity of the focusing coil should be such that a north-seeking pole is attracted to the image end of the focusing coil, with the indicator located outside of and at the image end of the focusing coil.
- n The alignment coil should be located on the tube so that its center is at a distance of 3-3/4 inches from the face of the tube, and be positioned so that its axis is coincident with the axis of the tube, the deflecting yoke, and the focusing coil.
- P The deflecting circuits must provide extremely linear scanning for good black-level reproduction. Dark-current signal is proportional to the scanning velocity. Any change in scanning velocity produces a black-level error in direct proportion to the change in scanning velocity.
- q The target voltage for each tube must be adjusted to that value which gives the desired operating dark current.
- Indicated range serves only to illustrate the operating targetvoltage range normally encountered.
- 5 Defined as the component of the highlight target current after dark-current component has been subtracted.

Typical Range of Dark Current

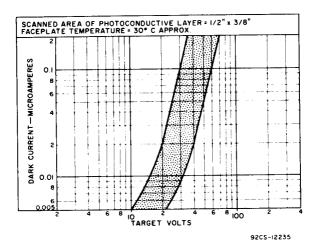

Spurious Signal Test

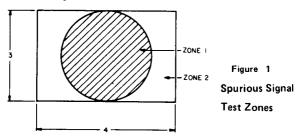

This test is performed using a uniformly illuminated test pattern containing two "zones" as shown in Figure 1. Illumination is for a peak signal current of 300 nanoamperes. Under these conditions, a blemish will be counted if its signal amplitude is greater than 45 nanoamperes under either illuminated or capped conditions, Some spots and fiber-optic distortion errors are more easily observed when viewing a red or a blue field. Therefore, Wratten filters numbers 25 or 47B (or equivalents) will be inserted into the light path to provide the red or blue fields. Table I shows the number of countable spots allowed. No two spots may be closer together than the distance equivalent to twenty TV lines.

Table I For scanned area of 1/2" x 3/8" (12.7 mm x 9.5 mm)

Blemish Size (equivalent number of raster lines)	Zone 1	Zone 2
over 4	0	0
over 3	2	3
over 1	6	10
1 or less	*	*


^{*}Spots of this size are allowed unless concentration causes a smudged appearance.

Dimensional Outline 1.125 ± .010 SEE NOTE 1 (28.58 ± 25) DIA 144 (3.66)269 (6.85)1 025 ± .003 (26.04 ± .08) DIA 6.350 ± 125 (161 3 ± 3.18) Dimensions are in inches unless otherwise stated. Dimensions in parentheses are in millimeters and are derived from the basic inch dimensions (1 inch = 25.4 mm). 375 (9.5)SEE NOTE 2 **BASE JEDEC** NO.E8 11 921 M 3821

Note 1 — Color encoding stripes, 530 line pairs/inch. The yellow (minus blue) stripes are shown vertically on the centerline, the cyan (minus red) stripes are 450 counterclockwise from the yellow stripes. The yellow stripes are perpendicular to the plane passing through tube axis and short index pin. This plane also defines the direction of horizontal scan.

Note 2 — Within this distance, diameter of bulb is 1.025" + 0.003" — 0.030".

Basing Diagram

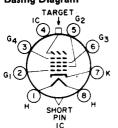

IC DIRECTION OF LIGHT: INTO FACE END OF TUBE

Model 33-86-02.

Pin 1 — Heater
Pin 2 — Grid No.1

Pin 3 - Grid No.4

Pin 4 — Internal Connection — Do Not Use

Pin 5 — Grid No.2

Pin 6 - Grid No.3


Pin 7 — Cathode Pin 8 — Heater

rin 6 – neater Flance – Tarcet

Flange - Target

Short Index Pin – Internal Connection –
Make No Connection

Typical System Response (These data are obtained by "sweeping" the input of a camera system, employing a SpectraPlex vidicon type 4445 with the output of a Bausch & Lomb Monochromator

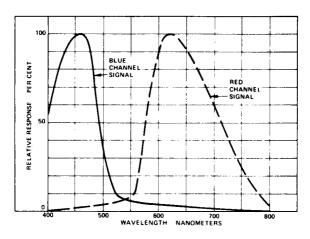

92LS - 3819

Typical Light Transfer Characteristic

